



Art. **N30144**


NISSAN PRIMASTAR

 09/02→05/14



OPEL VIVARO





 08/01→12/13

RENAULT TRAFIC

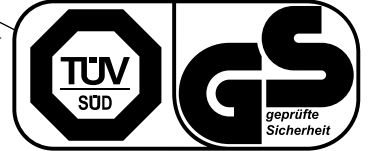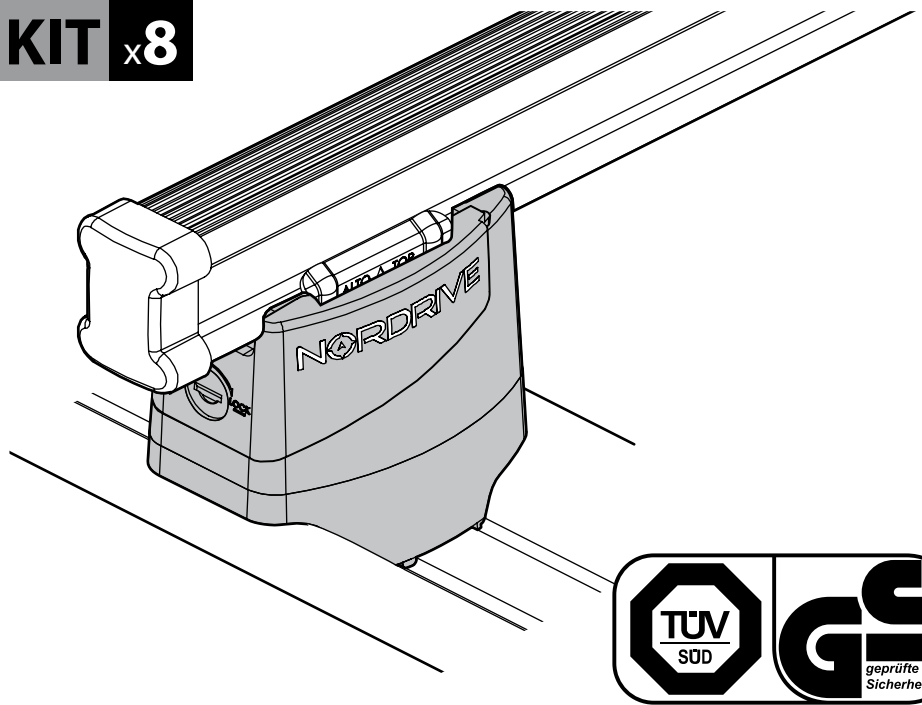 03/01→05/14


KIT x8



 <input checked="" type="checkbox"/> H = 1335mm L = 3098mm	 <input checked="" type="checkbox"/> H = 1335mm L = 3498mm
 <input type="checkbox"/> H = 1818mm L = 3098mm	 <input type="checkbox"/> H = 1818mm L = 3498mm

- (I) ADATTO PER
- (GB) SUITABLE FOR
- (F) INDIQUÉ POUR
- (D) GEEIGNET FÜR
- (E) ADECUADA PARA

NORDRIVE KARGO SERIES

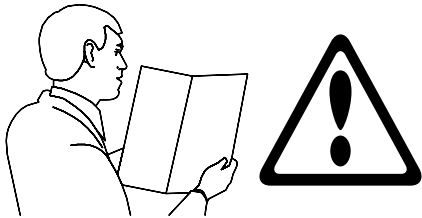


- (I) ISTRUZIONI DI MONTAGGIO
- (GB) FITTING INSTRUCTIONS
- (D) MONTAGEANLEITUNG
- (F) INSTRUCTIONS DE MONTAGE
- (E) INSTRUCCIONES DE MONTAJE
- (P) INSTRUÇÕES DE MONTAGEM
- (NL) MONTAGE-INSTRUCTIES
- (S) MONTERINGSANVISNING
- (FIN) ASENNUSOHJE
- (EST) PAIGALDUSJUHEND
- (AT) STIPRINÁŠANAS INSTRUKCIJA
- (LT) PRITVIRTINIMO INSTRUKCIJOS
- (PL) INSTRUKCJA MONTAŻU
- (RUS) Инструкции по установке
- (CZ) NÁVOD NA MONTÁŽ
- (SK) NÁVOD NA MONTÁŽ
- (SLO) NAVODILA ZA PRITRJEVANJE
- (HR) UPUTA ZA SASTAVLJANJE
- (H) A FELSZERELÉS MÓDJA
- (GR) Οδηγίες συναρμολόγησης
- (TR) MONTAJ TALIMATLARL
- (BG) ИНСТРУКЦИИ ЗА МОНТАЖ
- (SRB) UPUTSTVA ZA MONTAŽU



Kargo
ACCIAIO
Steel

- (I) BARRE KARGO
- (GB) KARGO BARS
- (F) BARRES KARGO
- (D) DACH-LASTENTRÄGER KARGO
- (E) BARRES KARGO

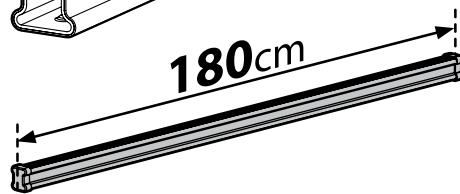


Art. **N10015** x4




Kargo-Plus
ALLUMINIO
Aluminium

- (I) BARRE KARGO-PLUS
- (GB) KARGO-PLUS BARS
- (F) BARRES KARGO-PLUS
- (D) DACH-LASTENTRÄGER KARGO-PLUS
- (E) BARRES KARGO-PLUS

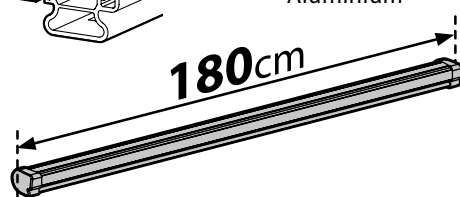


Art. **N10045** x4

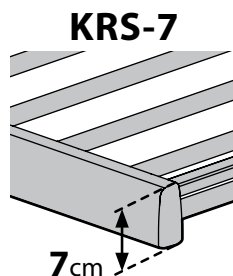

KRS-7

7cm

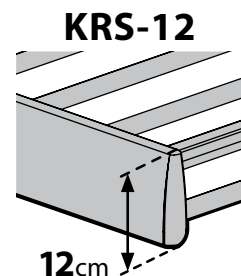


KRS-12

12cm

- (I) CESTE PORTATUTTO KRS-7 / KRS-12
- (GB) KRS-7 / KRS-12 VAN ROOF RACKS
- (F) GALERIE KRS-7 / KRS-12
- (D) DACHKÖRBEIN KRS-7 / KRS-12
- (E) BACAS KRS-7 / KRS-12

NORDRIVE®









TRANSPORT SOLUTIONS

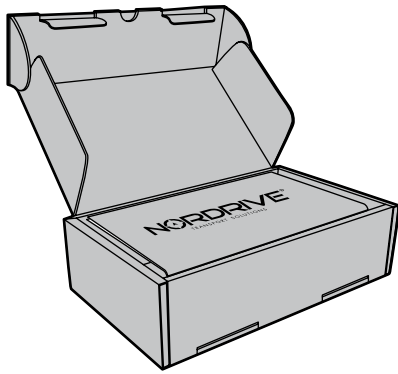


NORDRIVE[®]

TRANSPORT SOLUTIONS

Art. **N30144**

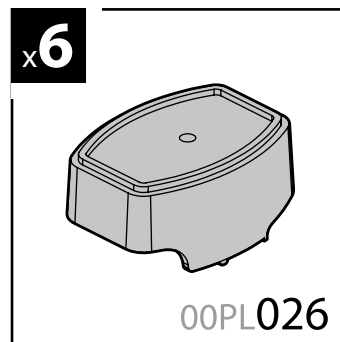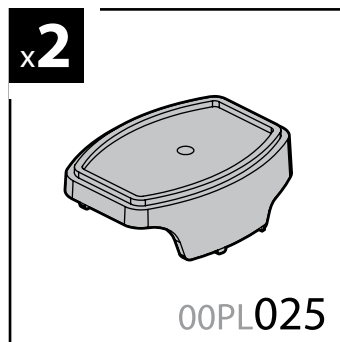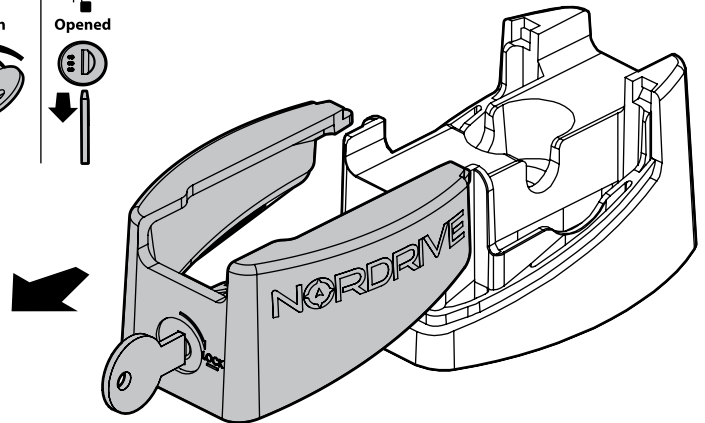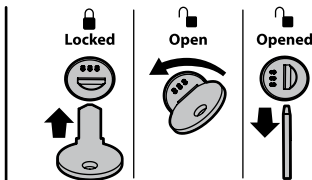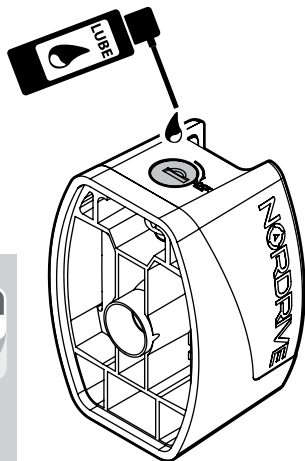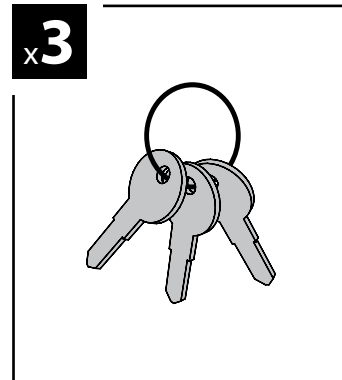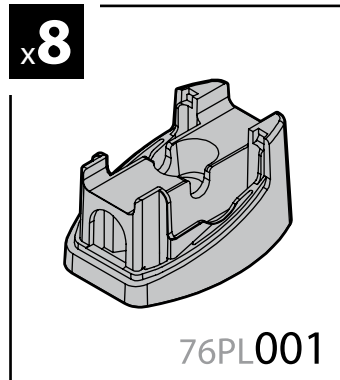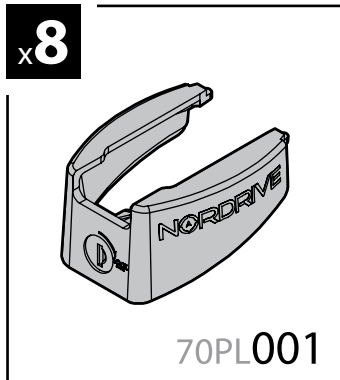


x 16

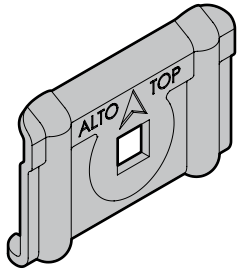


40FE001

x 8

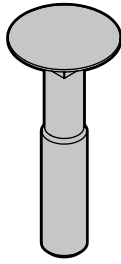


60BQ8045

x 8




62BB0800

x 2

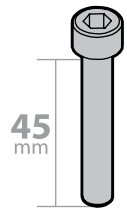

M6x45
60CE6045

x 6




M6x60
60CE6060

x 8




61ED0611

x 8




ø6 - ø15
82FE0001

x 8

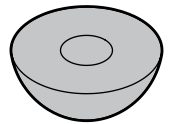


ø18 - ø6
60RO004

x 8

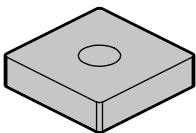


83FE0002

x 8

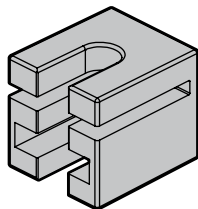


30PL006

x 1







72FE0001

x 1






72FE0002

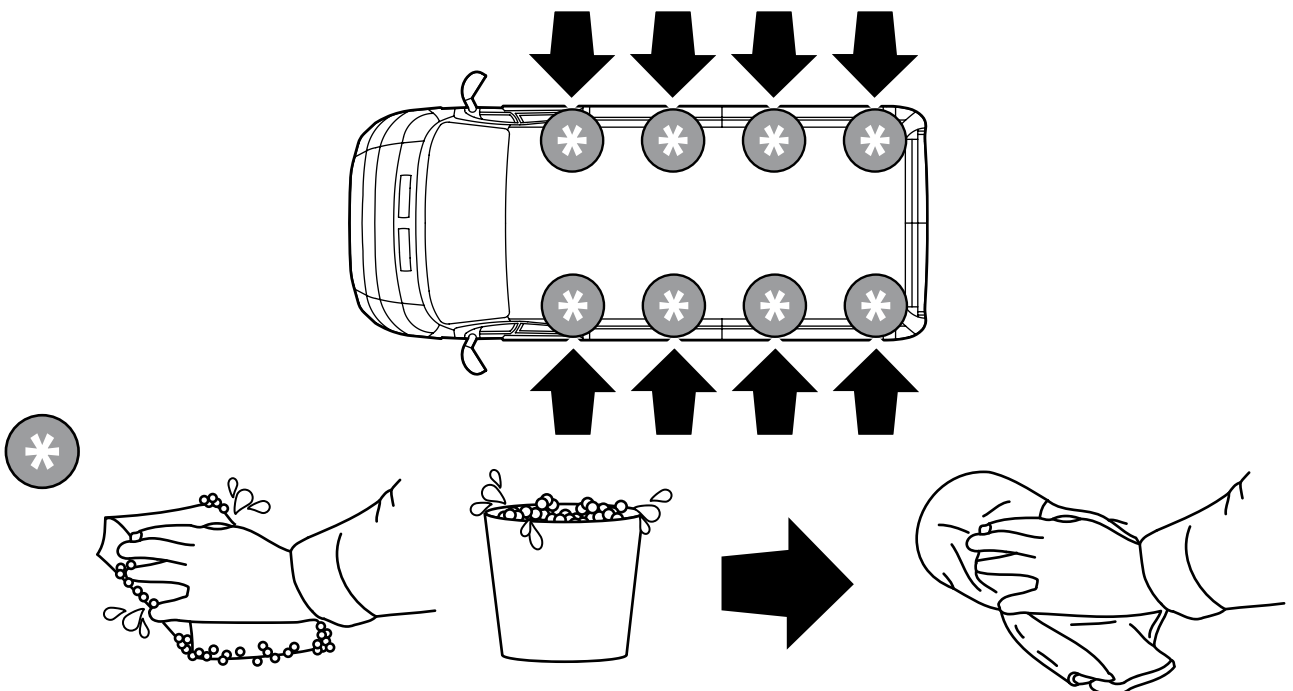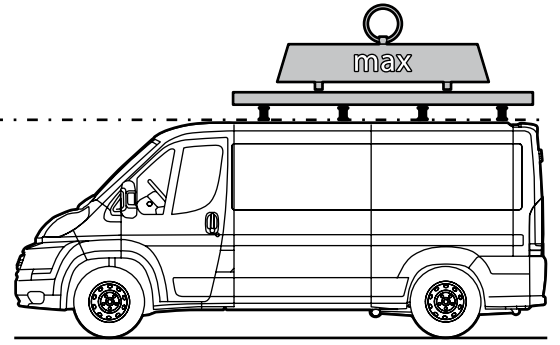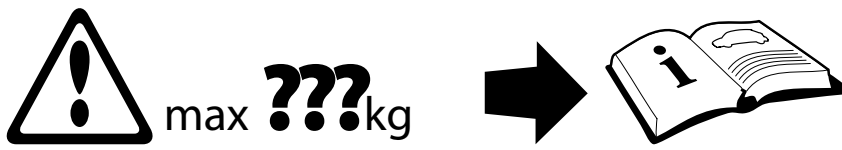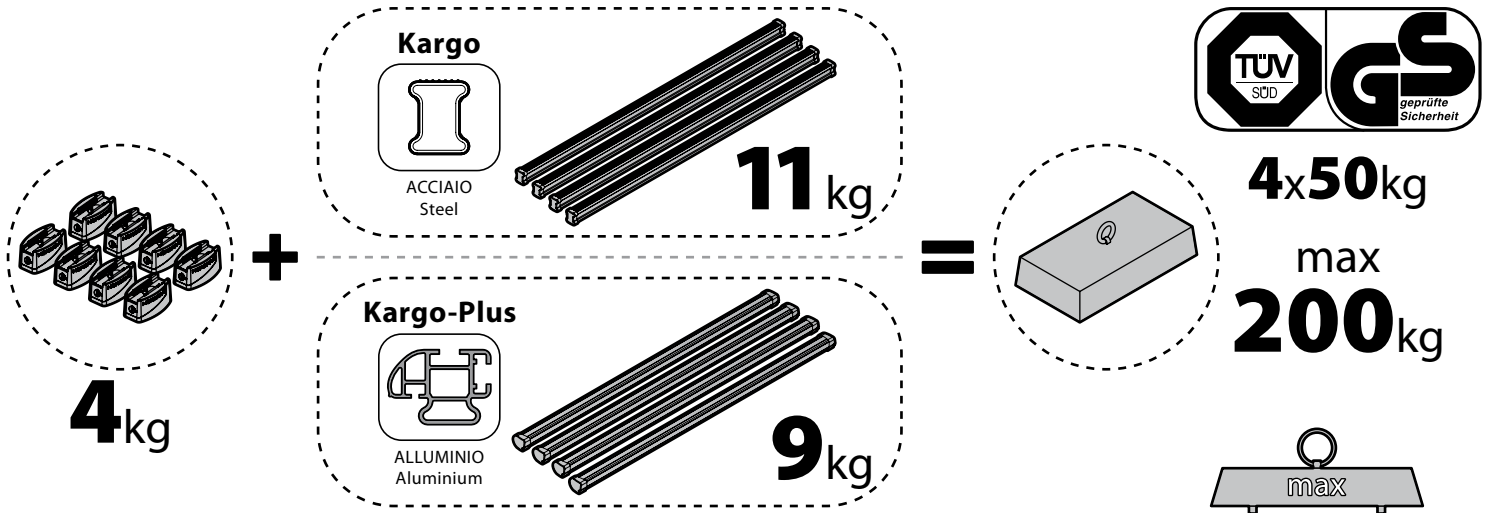


(I) ISTRUZIONI DI MONTAGGIO
 (GB) FITTING INSTRUCTIONS
 (D) MONTAGEANLEITUNG
 (F) INSTRUCTIONS DE MONTAGE
 (E) INSTRUCCIONES DE MONTAJE
 (P) INSTRUÇÕES DE MONTAGEM
 (NL) MONTAGE-INSTRUCTIES
 (S) MONTERINGSANVISNING

(FIN) ASENNUSOHJE
 (EST) PAIGALDUSJUHEND
 (LAT) STIPRINĀŠANAS INSTRUKCIJA
 (LT) PRITVIRTINIMO INSTRUKCIJOS
 (PL) INSTRUKCJA MONTAŻU
 (RUS) Инструкции по установке
 (CZ) NÁVOD NA MONTÁŽ
 (SK) NÁVOD NA MONTÁŽ


(SLO) NAVODILA ZA PRITRJEVANJE
 (HR) UPUTA ZA SASTAVLJANJE
 (H) A FELSZERELÉS MÓDJA
 (GR) Οδηγίες συναρμολόγησης
 (TR) MONTAJ TALIMATLARI
 (BG) ИНСТРУКЦИИ ЗА МОНТАЖ
 (SRB) UPUTSTVA ZA MONTAŽU

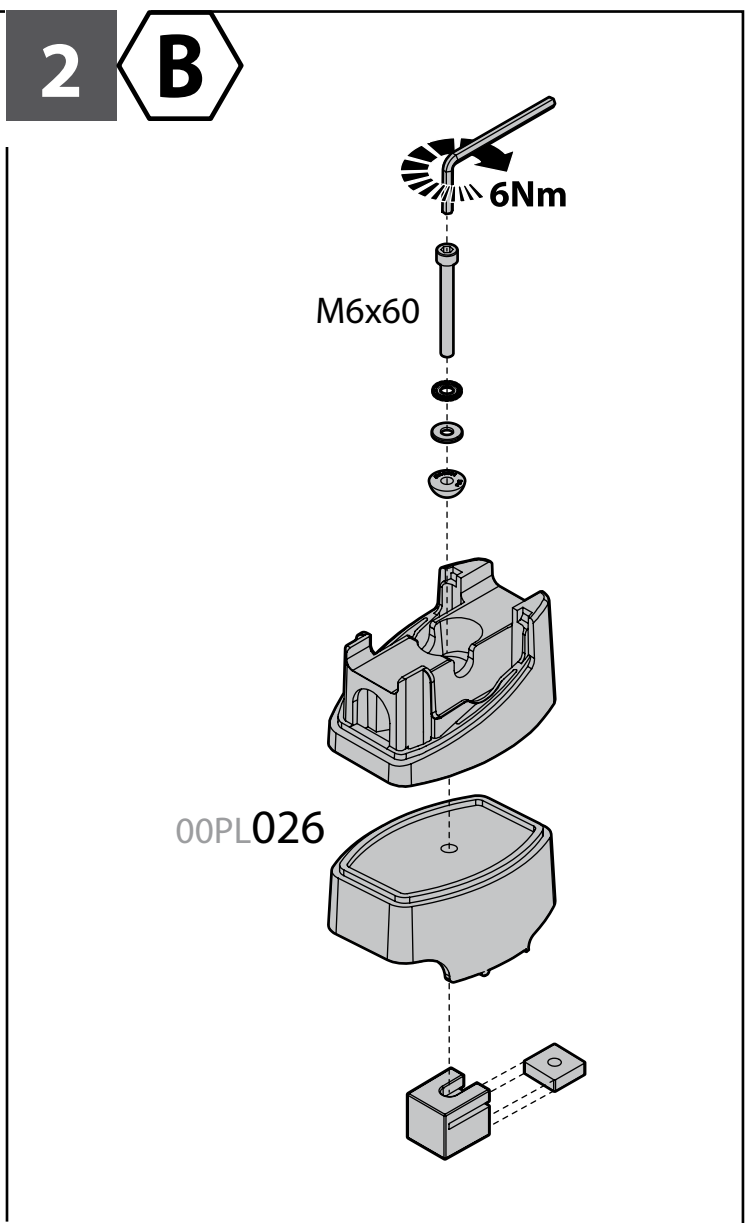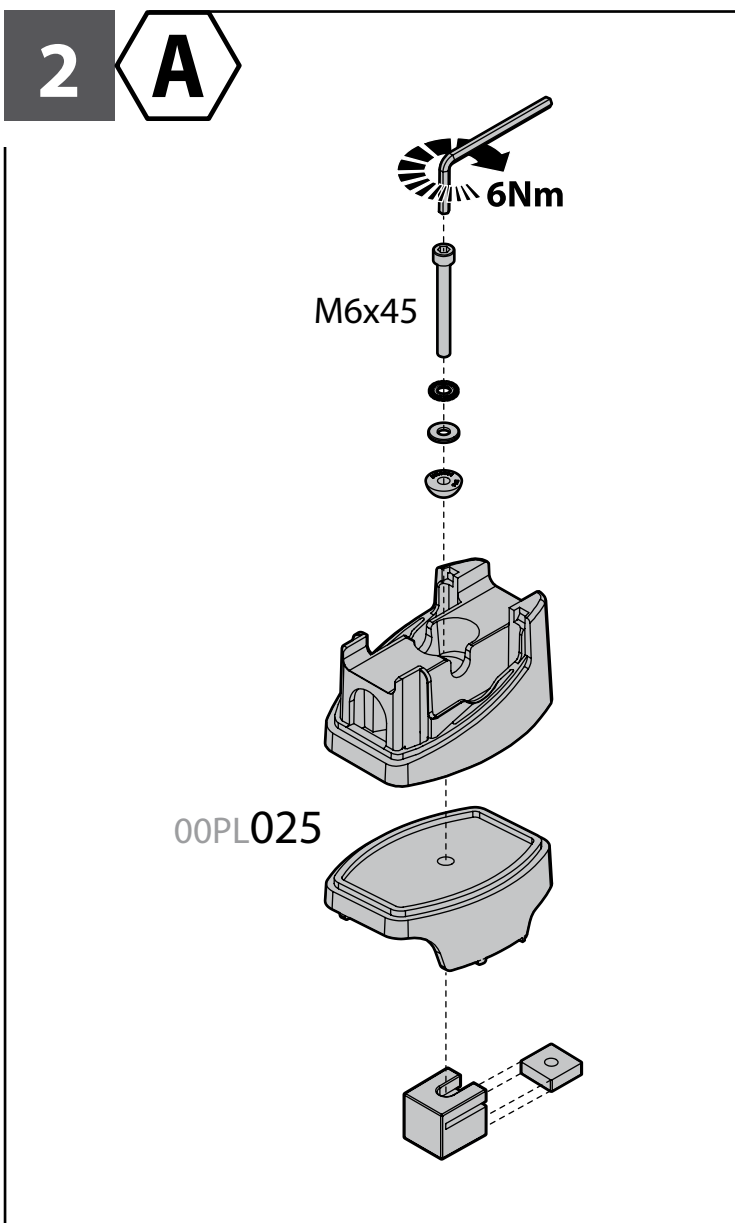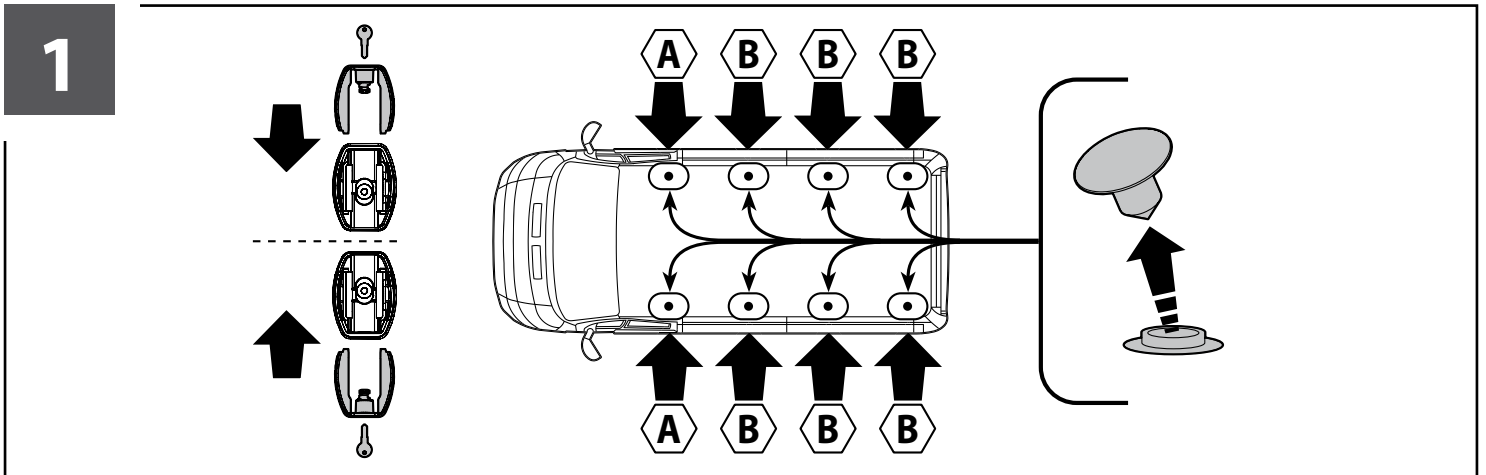

3

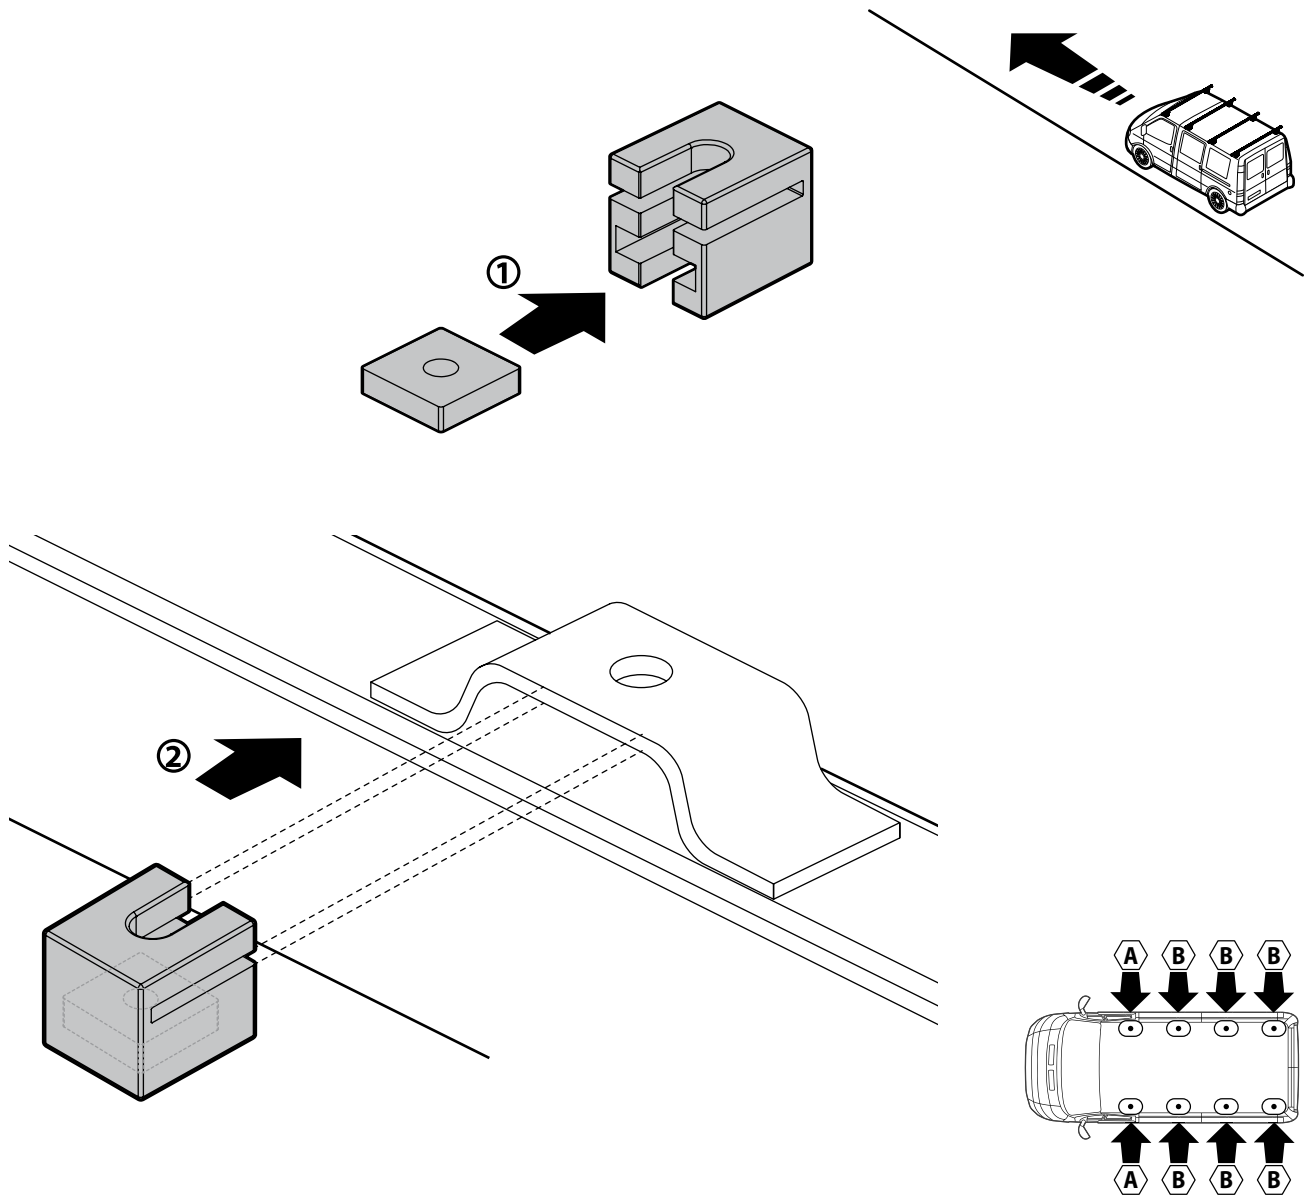

4

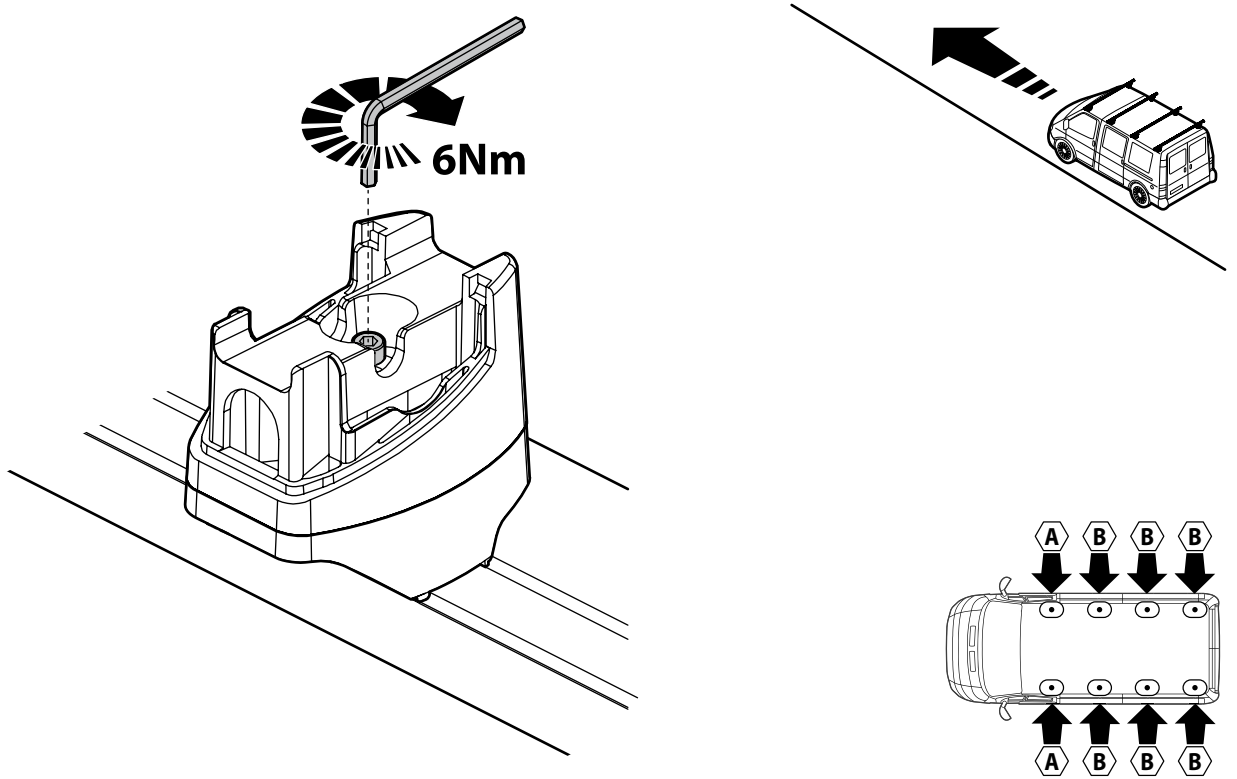




ATTENZIONE WARNING




A Kargo

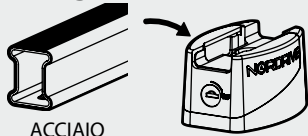

ACCIAIO
Steel







MONTAGGIO DIRETTO
SUI KIT PIEDI SPECIFICI
DIRECTLY ON FOOT KITS
BEFESTIGUNGSFÜSSE

B Kargo-Plus

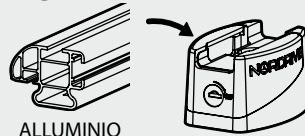


ALLUMINIO
Aluminium

MONTAGGIO DIRETTO
SUI KIT PIEDI SPECIFICI
DIRECTLY ON FOOT KITS
BEFESTIGUNGSFÜSSE

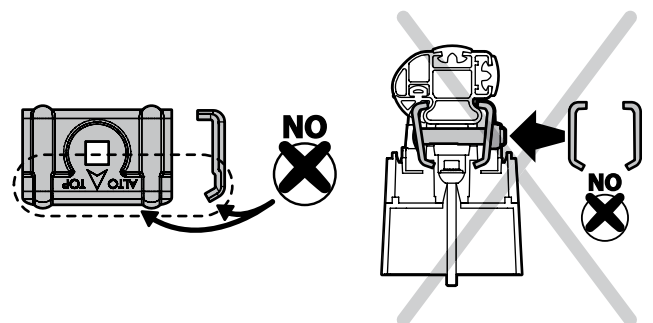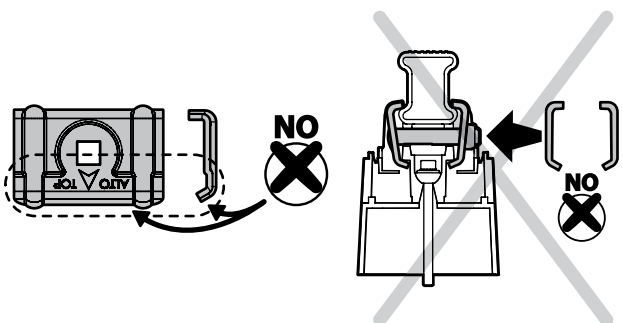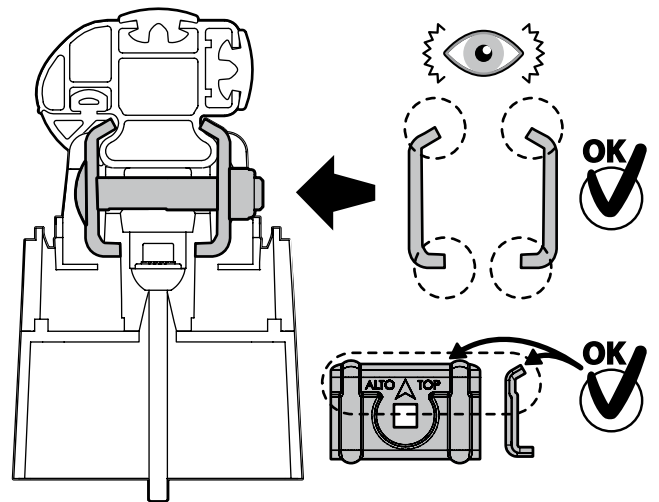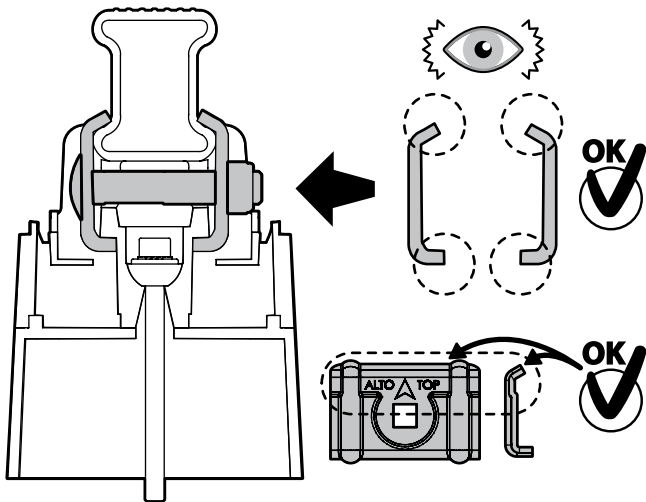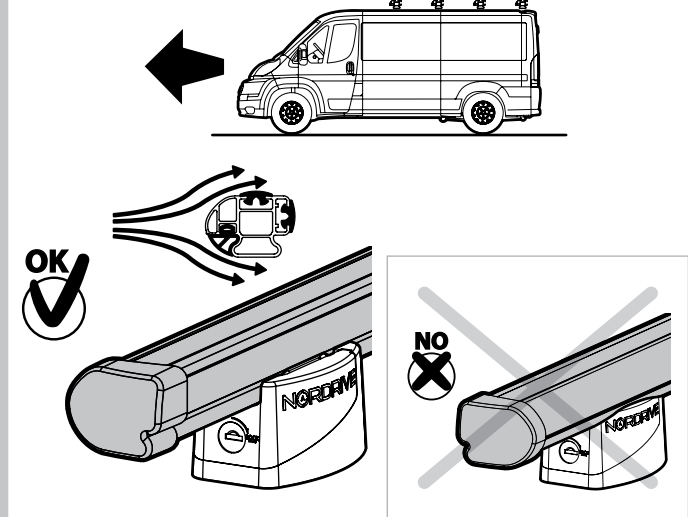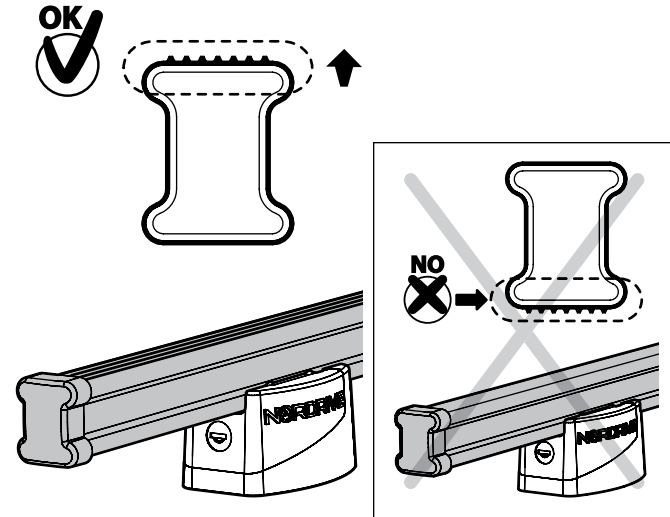

5

A

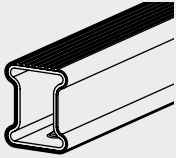

Kargo
ACCIAIO
Steel


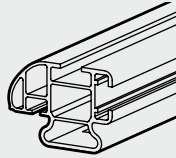


Diagram showing the Kargo steel bar being installed on a vehicle roof rack. The bar is positioned horizontally across the roof rails. Arrows indicate the distance from the center of the bar to the roof rails.

B



Kargo-Plus
ALLUMINIO
Aluminium




Diagram showing the Kargo-Plus aluminium bar being installed on a vehicle roof rack. The bar is positioned horizontally across the roof rails. Arrows indicate the distance from the center of the bar to the roof rails.

1

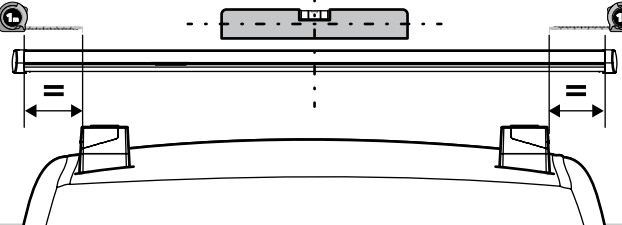


Diagram showing the Kargo-Plus aluminium bar being placed on the roof rails. Arrows indicate the distance from the center of the bar to the roof rails.

2

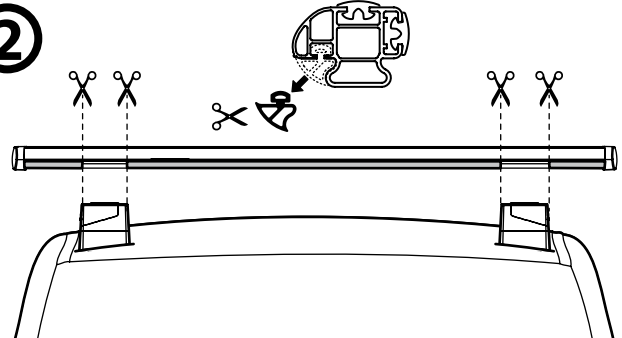


Diagram showing the Kargo-Plus aluminium bar being cut to length. Scissors are shown cutting the bar at the marked positions. A small inset shows the Kargo-Plus aluminium bar with a cut-off end.

6

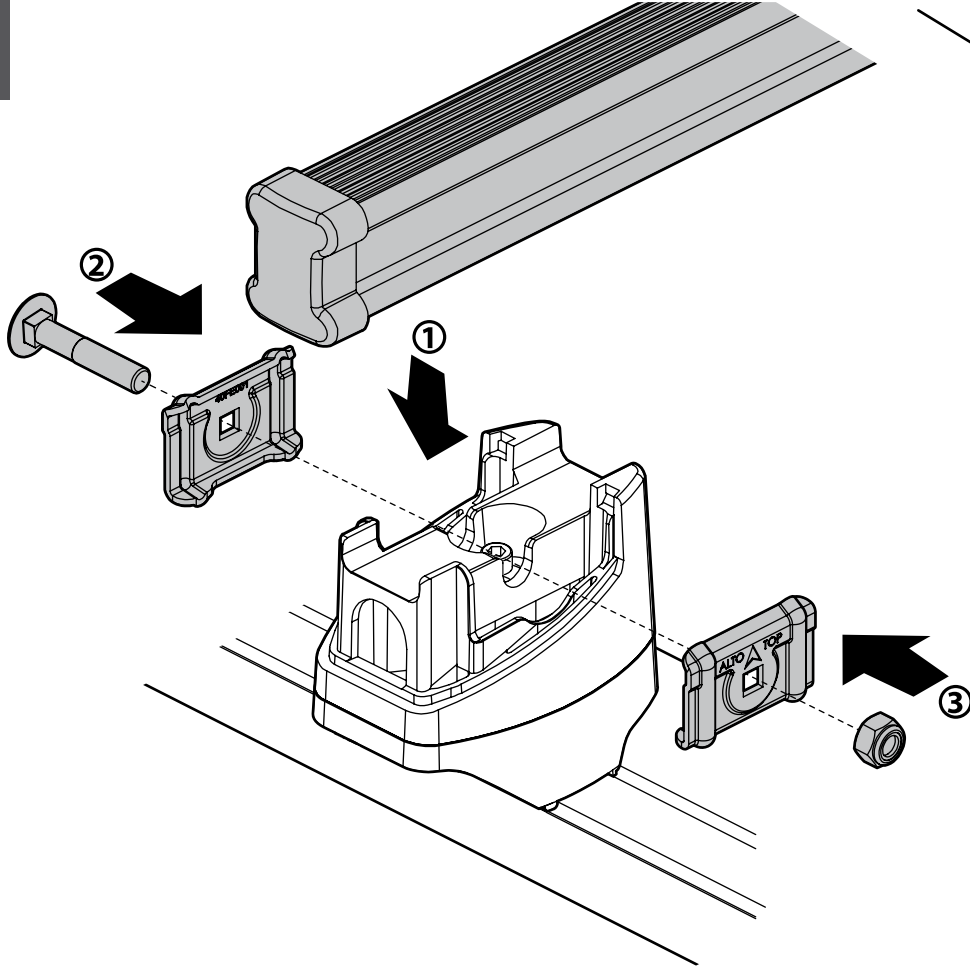


Diagram showing the assembly of the Kargo-Plus aluminium bar. The bar is shown being inserted into the roof rack. A bolt (2) is shown being inserted into the bar. A nut (3) is shown being inserted into the bar. The bar is shown being secured to the roof rack.

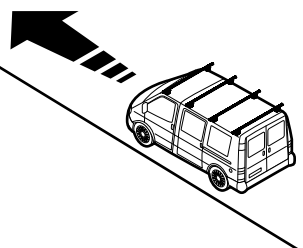


Diagram showing a vehicle with the Kargo-Plus aluminium bar installed on the roof rack. An arrow points to the left, indicating the direction of travel.



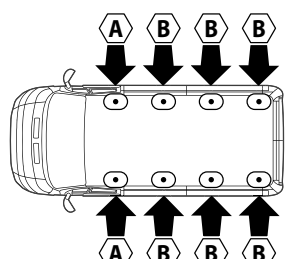


Diagram showing the layout of the roof rack. The bar is shown being secured to the roof rack. The diagram is labeled with A and B, indicating the positions of the bars.

7

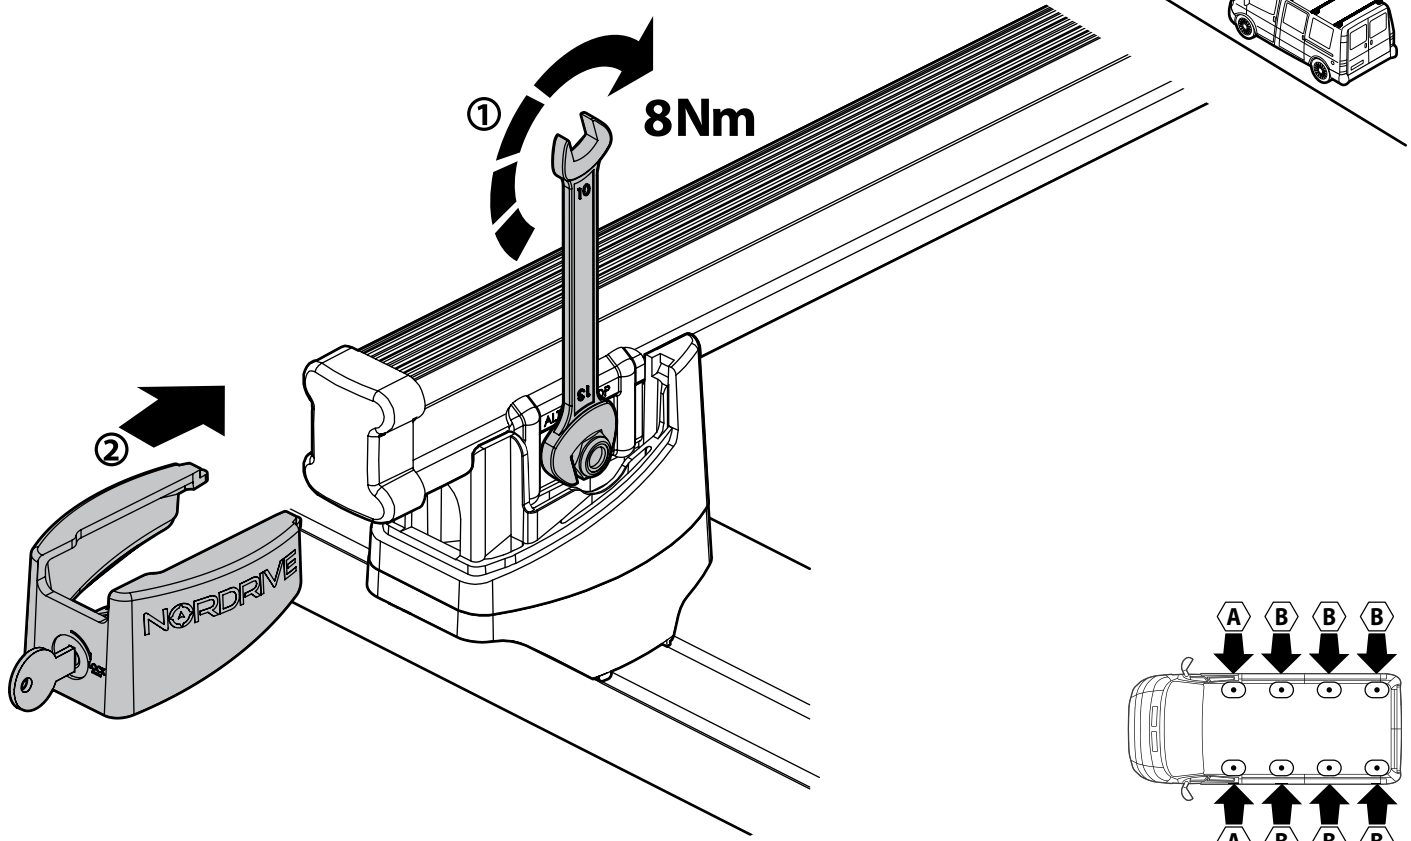


8

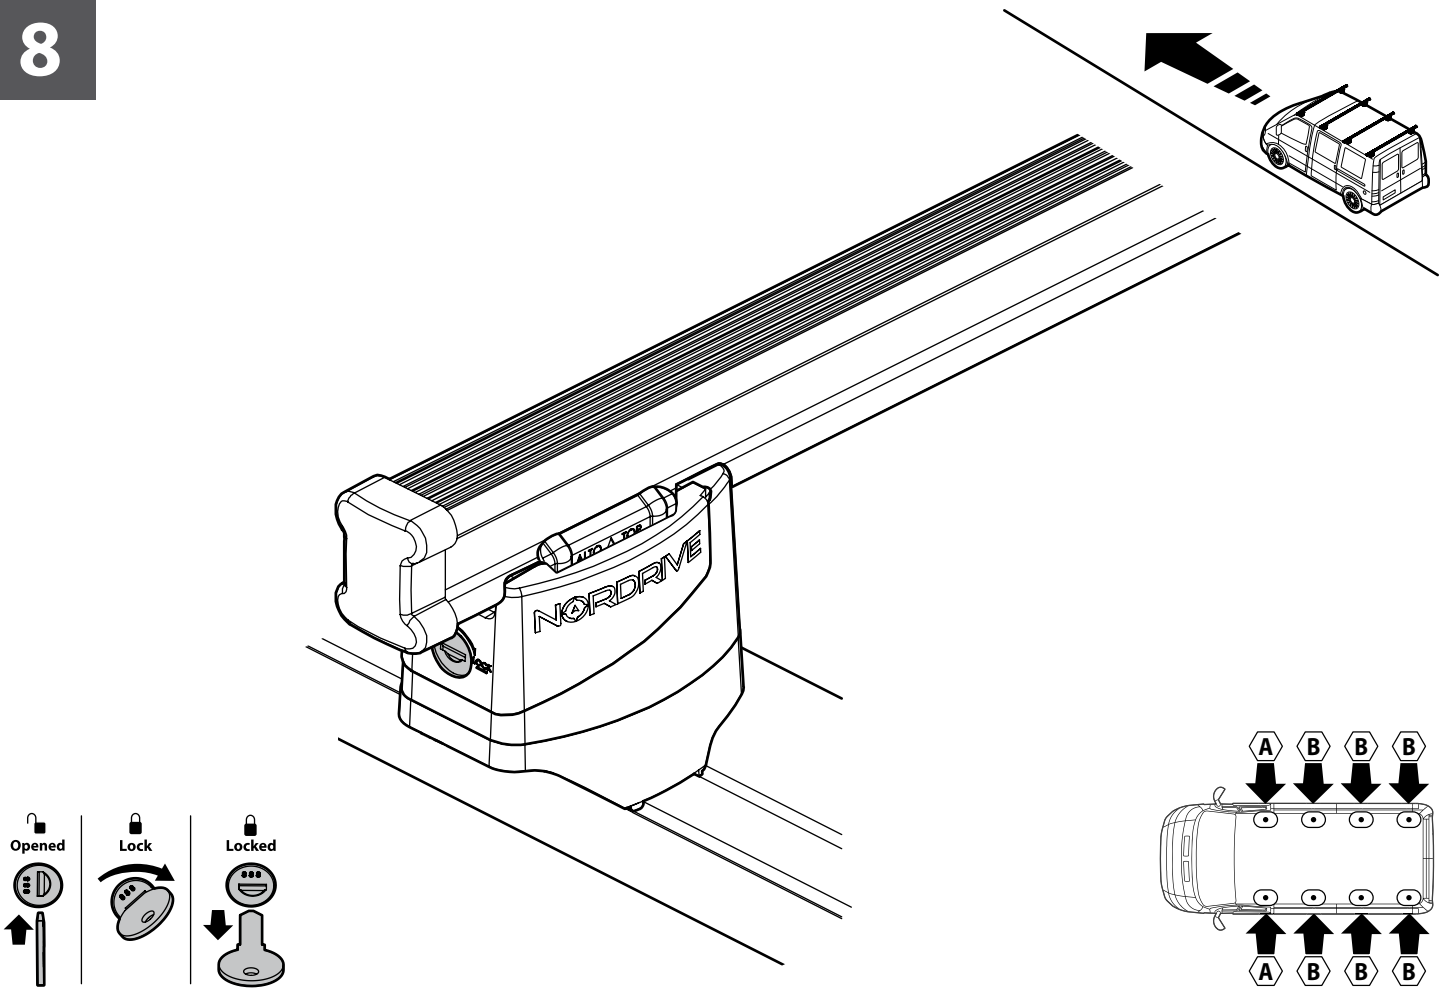

Kargo series




Acciaio / Steel

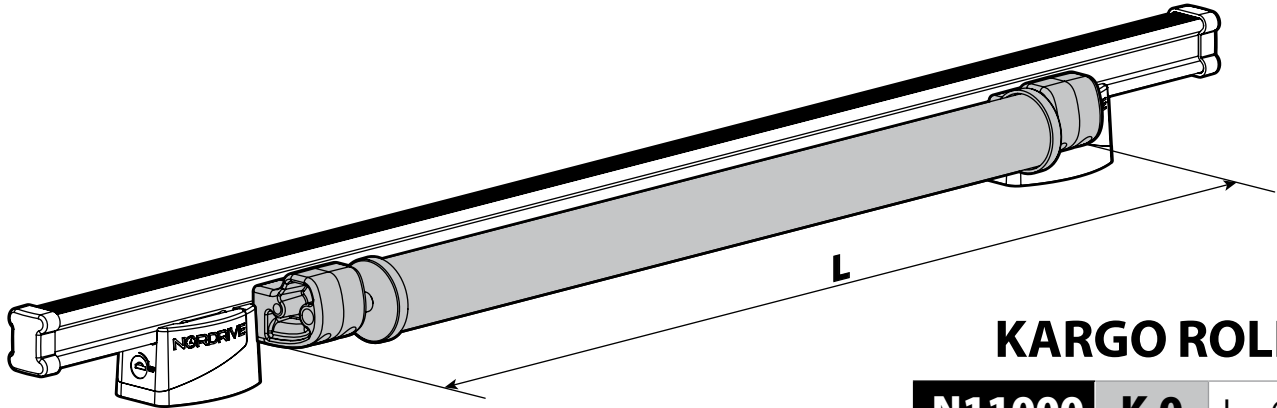


KARGO ROLLER

N11000	K-0	L = 64 cm
N11003	K-7	L = 96 cm

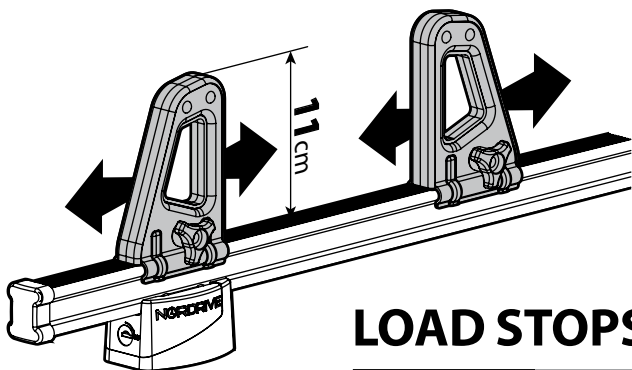


LOAD STOPS

N11001 K-1

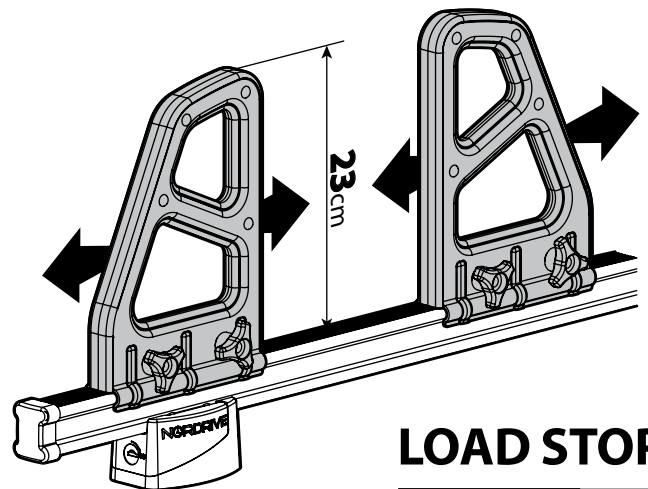

LOAD STOPS

N11002 K-2

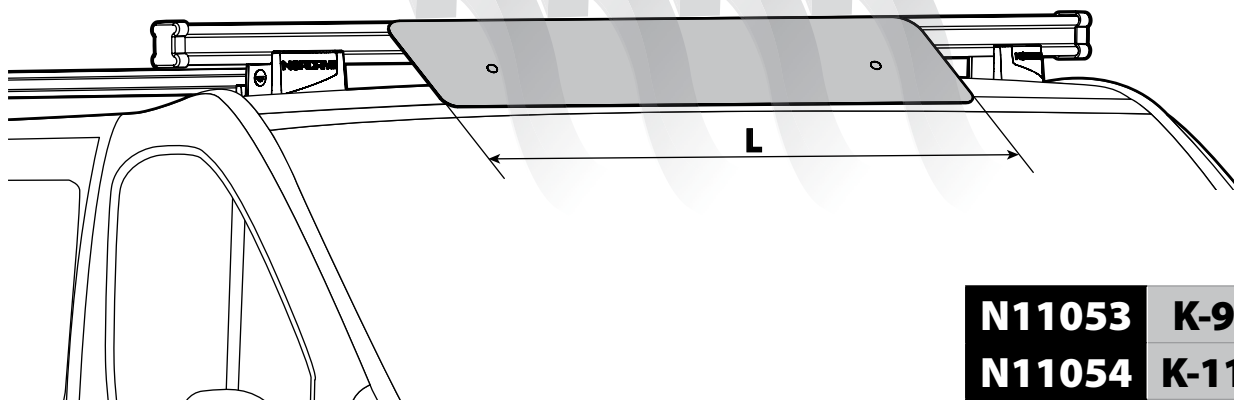


SPOILER


N11053	K-9	L = 95 cm
N11054	K-11	L = 110 cm

OPTIONALS PER / FOR / FÜR:

Kargo-Plus series


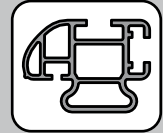


Alluminio / Aluminium

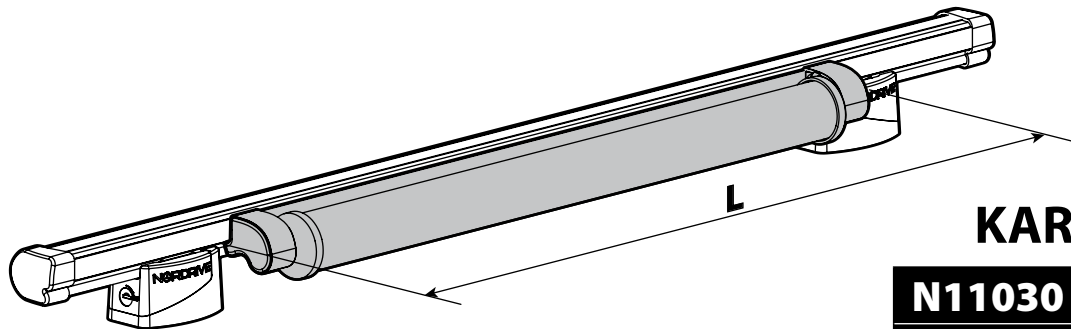


KARGO ROLLER

N11030	KP-0	L = 64 cm
N11034	KP-7	L = 96 cm

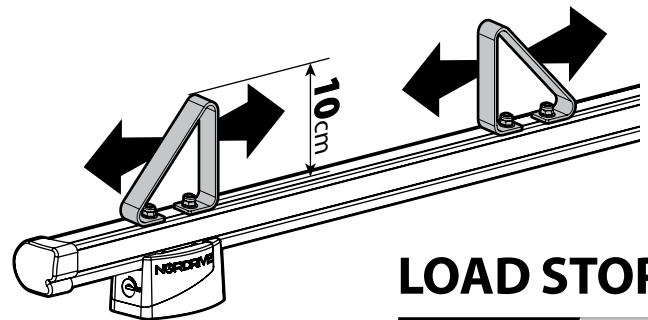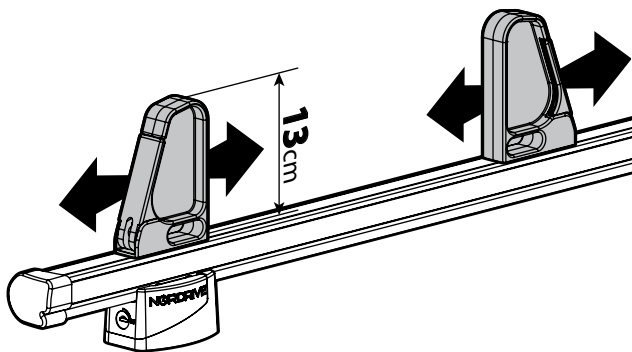


LOAD STOPS

N11031 KP-1

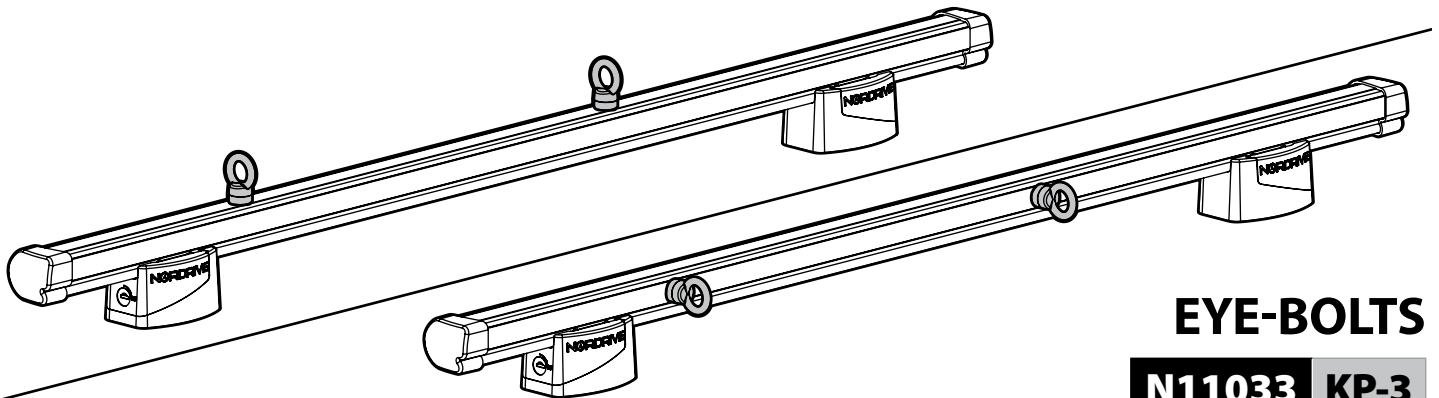

EYE-BOLTS

N11033 KP-3

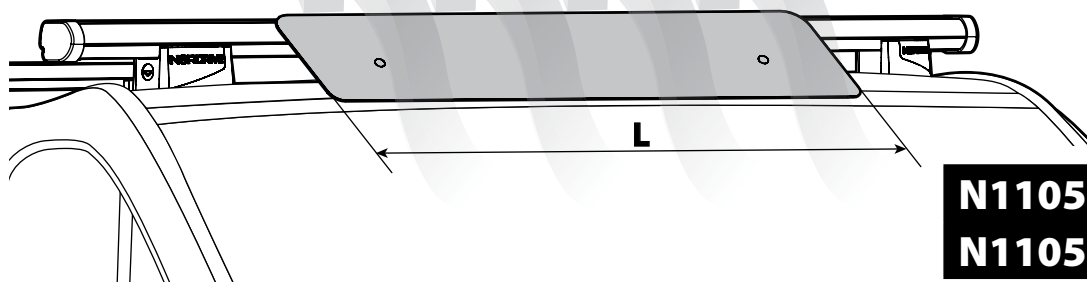

SPOILER

N11057	KP-9	L = 95 cm
N11058	KP-11	L = 110 cm


OPTIONALS PER / FOR / FÜR:

Kargo series



Acciaio / Steel


Kargo-Plus
series

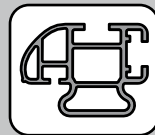

Alluminio / Aluminium



KARGO-TUBE

N11050	T200	L = 205 cm
N11051	T300	L = 305 cm
N11052	T400	L = 405 cm

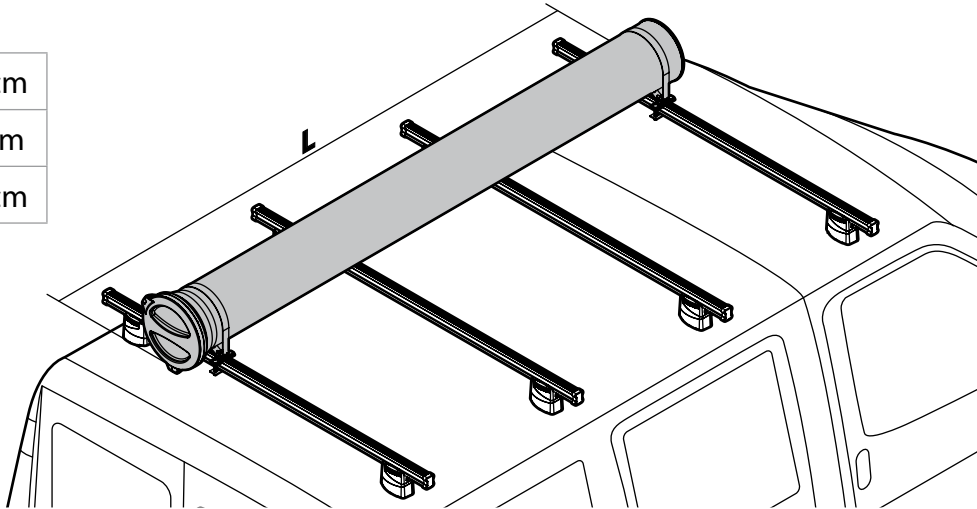


LADDER HOLDER STRAPS

N11065 U-5

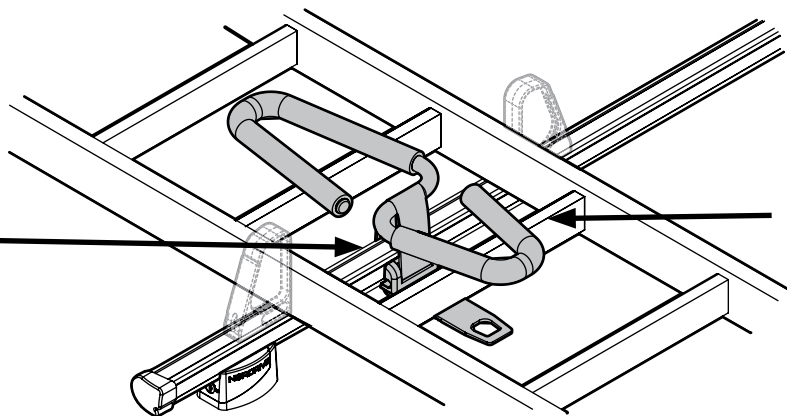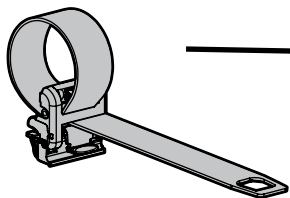


LADDER STEP ADAPTER

N11067 U-6

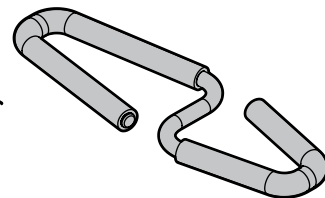

EXTENSION ROLLER

N11020	U-0	L = 64 cm
N11021	U-7	L = 96 cm

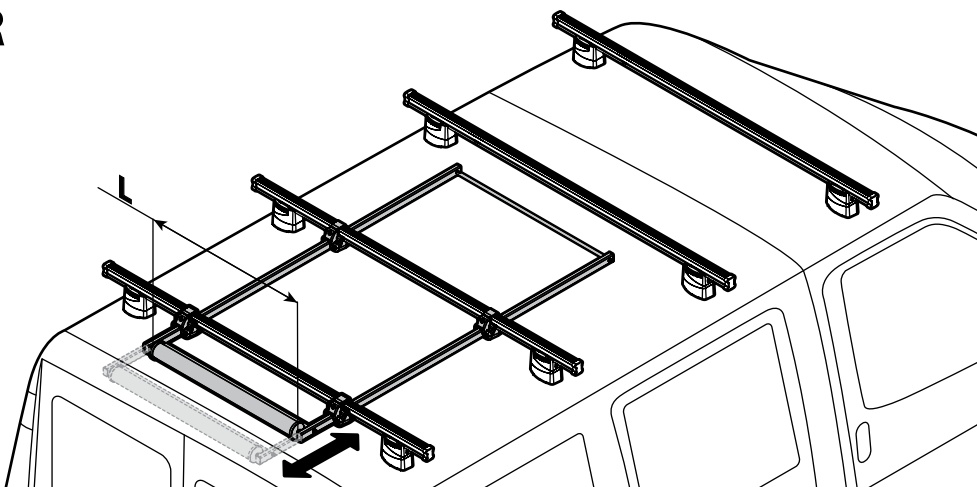

- (I) Lotto di produzione da comunicare per eventuali ricambi
- (GB) Production lot number to be communicated for any spare parts
- (F) Lot de production à communiquer pour toute pièce de rechange
- (D) Produktionscharge für eventuelle Ersatzteile
- (E) Lote de producción a comunicar por cualquier repuesto

Lot.

NORDRIVE®
TRANSPORT SOLUTIONS

NORDRIVE® is a registered trademark of
LAMPA S.p.A.
Via G. Rossa 53/55, 46019 Viadana (MN) ITALY
Tel. +39 0375 820700
UNI EN ISO 9001:2008 Certified Company
www.nordrive.it
www.lampa.it